


LaneAlert2x™

A Pavement Marking with a Message

LaneAlert 2x™ Application Quick Guide

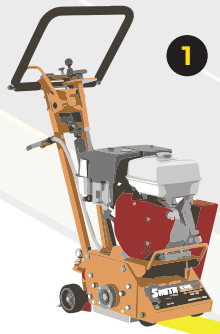

1

Remove Existing Markings, Sealants or Curring Compounds*



2

Clean Surface of Debris, Dirt and Oils



3

Layout and Mark Proper Alignment and Spacing




4

Preheat Surface to 225°F to 250°F Removing Moisture



5

Place and Melt Adhesive Panel to 360°F to 380°F to Molten State

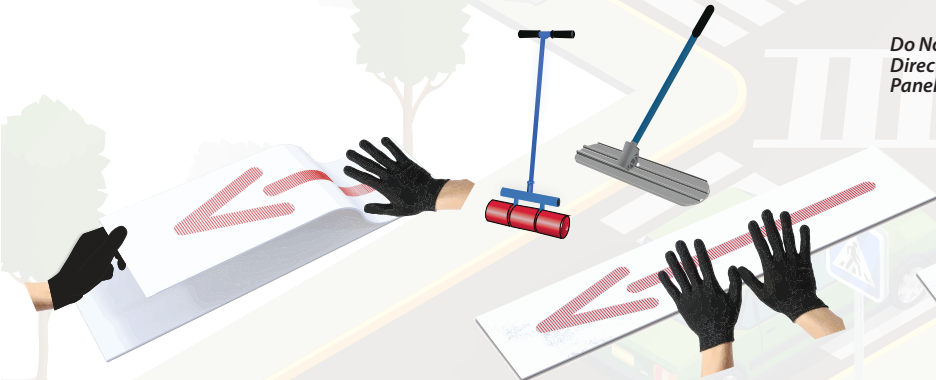

Align and Apply Marking Panel on Top of Molten Adhesive Panel


6



Press Marking Evenly into the Adhesive Panel, by Gloved Hand, Float or Approved Roller

7

Do Not Apply Heat Directly Atop Marking Panel

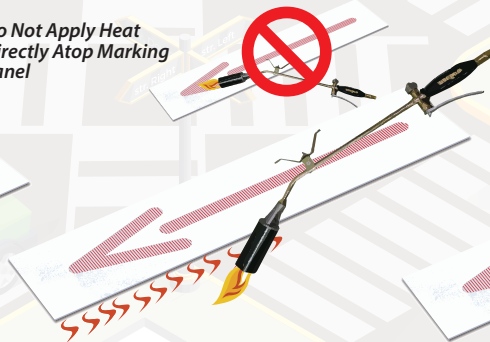


Heat Perimeter Pavement to Seal Edges of Panels to Pavement and One Another

8



Test Adhesion of Panels and Pavement

9

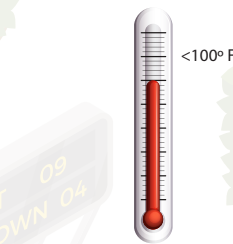

Let Cool to < 100°F Degrees Before Traffic

10



Safe, Smart, Simple Solutions.

PPP, Inc.
9957 Moorings Drive, Suite 301, Jacksonville FL, 32257
www.pppcatalog.com • 888.717.7771

*See Detailed Surface Preparation Instructions



Made & Serviced in the U.S.A.!

*Patented